

Konica



SERVICE MANUAL

**Model
7165**

NOVEMBER 2001

CSM-7165

KONICA BUSINESS TECHNOLOGIES, INC.

7165

SERVICE MANUAL

NOVEMBER 2001

IMPORTANT NOTICE

Because of the possible hazards to an inexperienced person servicing this equipment, as well as the risk of damage to the equipment, Konica Business Technologies strongly recommends that all servicing be performed by Konica-trained service technicians only.

Changes may have been made to this equipment to improve its performance after this service manual was printed. Accordingly, Konica Business Technologies, Inc., makes no representations or warranties, either expressed or implied, that the information contained in this service manual is complete or accurate. It is understood that the user of this manual must assume all risks or personal injury and/or damage to the equipment while servicing the equipment for which this service manual is intended.

Corporate Publications Department



CONTENTS

SAFETY AND IMPORTANT WARNING ITEMSS-1
IMPORTANT NOTICES-1
DESCRIPTION ITEMS FOR DANGER, WARNING AND CAUTIONS-1
SAFETY WARNINGSS-2
SAFETY INFORMATIONS-10
IMPORTANT INFORMATIONS-10
SAFETY CIRCUITSS-11
INDICATION OF WARNING ON THE MACHINE	...S-13

1. OUTLINE

OUTLINE OF SYSTEM1-1
7165 PRODUCT SPECIFICATIONS1-2
CENTRAL CROSS-SECTIONAL VIEW1-4
DRIVE SYSTEM DIAGRAM1-5

2. UNIT EXPLANATION

EXTERNAL SECTION2-A-1
[1] Composition2-A-1
DRIVE SECTION2-B-1
[1] Composition2-B-1
[2] Mechanisms2-B-1
[3] M2 (Drum) Control2-B-2
[4] M4 (Fixing) Control2-B-3
SCANNER SECTION2-C-1
[1] Composition2-C-1
[2] Mechanisms2-C-1
[3] M11 (Scanner) Control2-C-2
[4] Exposure control2-C-5
[5] Original Read Control2-C-5
[6] APS Control2-C-6
[7] AE Control2-C-7
WRITE UNIT2-D-1
[1] Composition2-D-1
[2] Mechanisms2-D-1
[3] M15 (Polygon) Control2-D-2
[4] Image Write Control2-D-3
DRUM UNIT2-E-1
[1] Composition2-E-1
[2] Mechanisms2-E-1
[3] Separation Claw Control2-E-2
[4] Paper Guide Plate Control2-E-2
CORONA UNIT SECTION2-F-1
[1] Composition2-F-1
[2] Mechanisms2-F-1
[3] Charging Control2-F-2
[4] Transfer/Separation Control2-F-3
[5] M14 (Charger Cleaning) Control2-F-4
[6] M10 (Transfer/Separation Cleaning) Control2-F-5
[7] PCL/TSL Control2-F-6
DEVELOPING UNIT2-G-1
[1] Composition2-G-1
[2] Mechanisms2-G-1
[3] M3 (Developing) Control2-G-2
[4] Developing Bias Control2-G-3
[5] Dmax Control2-G-4
[6] Gradation Correction Control2-G-6
[7] Dot Diameter Correction Control2-G-7
[8] Toner Density Control2-G-7
[9] FM4 (Developing Suction) Control2-G-8
TONER SUPPLY UNIT2-H-1
[1] Composition2-H-1
[2] Mechanisms2-H-1
[3] Toner Level Detection Control2-H-2
[4] M12 (Toner Supply) Control2-H-3

CLEANING/TONER RECYCLE UNIT	2-I-1
[1] Composition.....	2-I-1
[2] Mechanisms	2-I-1
[3] TGR (Toner Guide Roller) Control.....	2-I-2
[4] Other Control.....	2-I-2
TRAY 1/2 PAPER FEED UNIT	2-J-1
[1] Composition.....	2-J-1
[2] Mechanisms	2-J-1
[3] First Paper Feed Control	2-J-3
[4] Paper Up Drive Control	2-J-5
[5] Paper Size Detection Control	2-J-6
[6] No paper detection control	2-J-7
TRAY 3 PAPER FEED UNIT	2-K-1
[1] Composition.....	2-K-1
[2] Mechanisms	2-K-1
[3] First Paper Feed Control	2-K-3
[4] Paper Up Drive Control	2-K-5
[5] Paper Size Detection Control	2-K-6
[6] No paper detection control	2-K-7
BY-PASS TRAY.....	2-L-1
[1] Composition.....	2-L-1
[2] Mechanisms	2-L-1
[3] First Paper Feed Control	2-L-2
[4] Paper Up/Down Control.....	2-L-3
[5] Paper Size Detection Control	2-L-4
[6] No paper detection control	2-L-5
VERTICAL CONVEYANCE SECTION	2-M-1
[1] Composition.....	2-M-1
[2] Mechanisms	2-M-1
[3] Vertical Conveyance Control	2-M-2
ADU	2-N-1
[1] Composition.....	2-N-1
[2] Mechanisms	2-N-2
[3] Loop/Second Paper Feed Control	2-N-7
[4] Paper Conveyance Control	2-N-9
[5] Paper Reverse and Exit Control.....	2-N-10
[6] ADU Paper Conveyance/Feed Control.....	2-N-13
FIXING UNIT	2-O-1
[1] Composition.....	2-O-1
[2] Mechanisms	2-O-1
[3] M16 (Web Drive) Control.....	2-O-3
[4] Fixing Temperature Control.....	2-O-4
OTHER KINDS OF CONTROL.....	2-P-1
[1] Parts Energized when SW1 (Main Power) is OFF	2-P-1
[2] Parts that Operate when SW1 (Main Power)/SW2 (Sub Power) is ON	2-P-2
[3] Cooling Fan Control.....	2-P-3
[4] Operation Panel Control.....	2-P-6
[5] Counter Control	2-P-8
[6] Option Control	2-P-9

3. DISASSEMBLY/ASSEMBLY

EXTERNAL SECTION.....	3-A-1
[1] Replacing the Ozone Filter.....	3-A-1
[2] Replacing the Developing Suction Filter	3-A-1
[3] Removing and Reinstalling the External Covers	3-A-2
[4] Changing the Operation Panel Attachment Angle and Removing/Reinstalling	3-A-4
[5] Resetting the Circuit Breaker	3-A-6
DRIVE SECTION.....	3-B-1
[1] Removing and Reinstalling the Drum Motor(M2).....	3-B-1
[2] Removing and Reinstalling the Fixing Input Gear	3-B-2
SCANNER SECTION	3-C-1
[1] Screws that Must not be Removed	3-C-1
[2] Removing and Reinstalling the CCD Unit	3-C-1
[3] Replacing the Exposure Lamp	3-C-2
[4] Removing and Reinstalling the Exposure Unit.....	3-C-3
[5] Installing the Optics Wire	3-C-4
[6] Cleaning the Slit Glass and Platen Glass.....	3-C-6
WRITE SECTION	3-D-1
[1] Removing and Reinstalling the Write Unit	3-D-1
[2] Cleaning the Dust-proof Glass	3-D-2
DRUM UNIT	3-E-1
[1] Removing and Reinstalling the Drum Unit.....	3-E-1
[2] Installing the Coupling.....	3-E-2
[3] Removing, Cleaning, and Reinstalling the Drum	3-E-3
[4] Removing and Reinstalling the Separation Claws and Separation Claw Solenoid	3-E-4
[5] Removing and Reinstalling the Toner Control Sensor Board.....	3-E-6
CORONA UNIT	3-F-1
[1] Screws that Must not be Removed	3-F-1
[2] Removing and Reinstalling the Charging Corona Unit.....	3-F-1
[3] Removing and Reinstalling the Charge Control Plate	3-F-2
[4] Replacing the Charging Wires	3-F-2
[5] Removing and Reinstalling the Charging Wire Cleaning Unit	3-F-3
[6] Removing and Reinstalling the PCL	3-F-3
[7] Cleaning the Charging Corona Unit/PCL.....	3-F-4
[8] Removing and Reinstalling the Transfer/ Separation Corona Unit.....	3-F-4
[9] Removing and Reinstalling the Plunger Prevention Plate.....	3-F-5

[10] Replacing the Transfer/Separation Wires and Transfer/Separation Wire Cleaning Block.....	3-F-5	VERTICAL CONVEYANCE SECTION	3-M-1
[11] Removing and Reinstalling the TSL Unit	3-F-7	[1] Removing and Reinstalling the Vertical Conveyance Section	3-M-1
DEVELOPING UNIT	3-G-1	[2] Removing and Reinstalling the Vertical Conveyance MC (MC11, MC12)	3-M-1
[1] Screws that must not be Removed.....	3-G-1	ADU UNIT.....	3-N-1
[2] Removing and Reinstalling the Developing Unit	3-G-1	[1] Drawing out and Reinstalling the ADU Stand	3-N-1
[3] Replacing the Developer	3-G-2	[2] Cleaning the Paper Dust Removing Brush	3-N-1
[4] Cleaning the Developing Unit Bias shaft.....	3-G-3	[3] Cleaning the Paper Mis-centering PS (PS70)/Leading Edge PS (PS43)	3-N-2
TONER SUPPLY UNIT.....	3-H-1	[4] Removing and Reinstalling the Registration MC (MC1).....	3-N-2
[1] Replacing and Cleaning the Toner Cartridge	3-H-1	[5] Removing and Reinstalling the Second Paper Feed Unit	3-N-3
CLEANING/TONER RECYCLE UNIT.....	3-I-1	[6] Cleaning the Registration PS (PS44)	3-N-4
[1] Removing and Reinstalling the Cleaning Blade	3-I-1	[7] Removing and Reinstalling the Registration Roller.....	3-N-5
[2] Removing and Reinstalling the Toner Guide Roller (TGR).....	3-I-2	[8] Removing and Reinstalling the Pre-transfer Roller.....	3-N-6
PAPER FEED UNITS OF TRAYS 1 AND 2.....	3-J-1	[9] Cleaning the ADU Paper Reverse PS (PS45)/Reverse/Exit PS (PS46)	3-N-7
[1] Removing and Reinstalling the Paper Feed Unit.....	3-J-1	[10] Removing and Reinstalling the ADU Reverse Roller.....	3-N-9
[2] Removing and Reinstalling the Paper Feed Trays 1 and 2	3-J-1	[11] Removing and Reinstalling the ADU Stand	3-N-10
[3] Removing and Reinstalling the Paper Feed Roller and Feed Roller Rubber.....	3-J-2	[12] Removing and Reinstalling the Pre-registration Roller	3-N-11
[4] Removing and Reinstalling the Double Feed Prevention Roller Rubber.....	3-J-2	[13] Removing and Reinstalling the ADU Conveyance Roller 3 and 4	3-N-12
[5] Replacing the Pre-registration and Feed Clutches (MCs).....	3-J-3	[14] Removing and Reinstalling the ADU Conveyance Roller 1 and 2.....	3-N-15
[6] Replacing the Wires.....	3-J-4	[15] Removing and Reinstalling the Paper Reverse/Exit Roller	3-N-17
PAPER FEED UNIT OF TRAY 3	3-K-1	FIXING UNIT	3-O-1
[1] Removing and Reinstalling the Paper Feed Unit.....	3-K-1	[1] Removing and Reinstalling the Fixing Unit	3-O-1
[2] Removing and Reinstalling Paper Feed Tray 3.....	3-K-1	[2] Removing and Reinstalling the Fixing Unit (Top)	3-O-1
[3] Removing and Reinstalling the Paper Feed Roller and Feed Roller Rubber.....	3-K-2	[3] Removing and Reinstalling the Web Cover	3-O-2
[4] Removing and Reinstalling the Double Feed Prevention Roller Rubber	3-K-2	[4] Removing and Reinstalling the Cleaning Web	3-O-2
[5] Replacing the Pre-registration and Feed Clutches (MCs).....	3-K-3	[5] Replacing the Fixing Heater Lamps (L2, L3)	3-O-3
[6] Replacing the Wires.....	3-K-4	[6] Replacing the Fixing Heater Lamp(L4)	3-O-4
BY-PASS FEED TRAY	3-L-1	[7] Removing and Reinstalling the Fixing Separation Claw (Upper) Unit and Fixing Separation Claws (Upper)	3-O-5
[1] Removing and Reinstalling the by-pass Feed Tray	3-L-1	[8] Removing and Reinstalling the Fixing Separation Claw (Lower) Unit and Fixing Separation Claws (Lower)	3-O-6
[2] Replacing the Paper Feed Roller/Paper Feed Roller Rubber	3-L-1	[9] Removing and Reinstalling the Fixing Upper Roller	3-O-7
[3] Replacing the Double Feed Prevention Roller Rubber	3-L-2		

CONTENTS

[10]	Removing and Reinstalling the Fixing Lower Roller	3-O-8
[11]	Removing and Reinstalling the De-curler.....	3-O-8
[12]	Removing and Reinstalling the Fixing Temperature Sensors 1 and 2.....	3-O-9
[13]	Removing and Reinstalling the Thermostat (TS1)	3-O-11
[14]	Removing and Reinstalling the Thermostat (TS2)	3-O-12